

Indoor Humidity Gauge Thermometer

 
INSTALLING BATTERIES

Your thermometer requires two AAA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

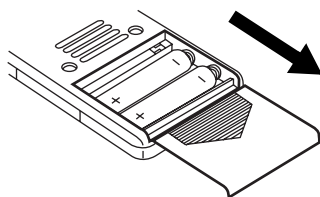


1. Slide off the mounting plate and battery cover.
2. Insert batteries according to the polarity symbols (+ and -).
3. Replace the cover and mounting plate.

When the display dims or the thermometer stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

SETTING TO FAHRENHEIT OR CELSIUS

 To display the temperature in Fahrenheit, slide open the battery compartment cover and set °C/°F to °F. To display the temperature in Celsius, set °C/°F to °C.

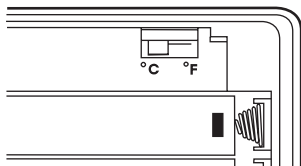


MOUNTING THE THERMOMETER

You can use the adhesive tape on the back of the mounting bracket, or screws (not supplied), to mount the thermometer on the wall. Or you can use the built-in stand to set it on a flat surface.


Using the Adhesive Tape

 - Remove the tape's backing
- Press the mounting plate against a wall
- Slide the thermometer into the plate

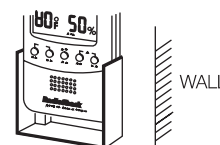


Using Screws

 - Drive two screws into the wall through the mounting plate
- Slide the thermometer into the plate

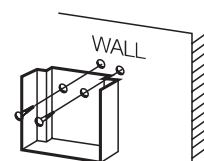


Using the Stand

 - Remove the mounting plate
- Lift the stand
- Set the thermometer on a flat surface

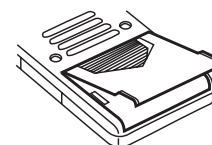


OPERATION

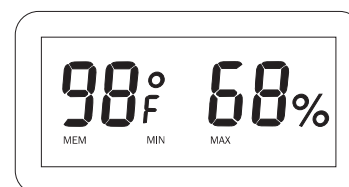 


The thermometer displays the current indoor temperature and humidity, and stores the minimum and maximum readings.

Minimum and Maximum Temperatures

 To show the lowest temperature since the last reset, press **THERMO MIN**.



 
To show the highest temperature since the last reset, press **THERMO MAX**.



Press **THERMO MIN** or **THERMO MAX** again to view the current temperature.


Resetting the Temperatures

 To reset the minimum or maximum temperature to the current temperature, press **THERMO MIN** or **THERMO MAX** (as appropriate), then press **MEM CLEAR**.




Minimum and Maximum Humidity

 To show the lowest humidity since the last reset, press **HYGRO MIN**.



 
To show the highest humidity since the last reset, press **HYGRO MAX**.




Press **HYGRO MIN** or **HYGRO MAX** again to view the current relative humidity.

Resetting the Humidity

 To reset the humidity to the current humidity, press **HYGRO MIN** or **HYGRO MAX**, then press **MEM CLEAR**.



Comfort Zone

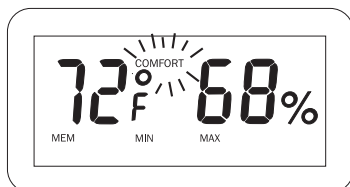 

- **COMFORT** appears when the relative humidity is between 40 and 70% and the temperature is between 68 and 77°F.

- **DRY** appears when the humidity is 40% or below.
- **WET** appears when the humidity is 70% or above.

CARE

- Handle the thermometer gently.
- Avoid storing the thermometer in dusty areas.
- Keep the thermometer dry. If it gets wet, wipe it dry immediately.

Modifying or tampering with the thermometer's internal components can cause a malfunction and might void the thermometer's warranty. If your thermometer is not performing properly, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Two AAA Batteries

Battery Life About One Year

Temperature

Range 32°F to 122°F (0°C to 50°C)

Accuracy:

32°F to 104°F (0°C to 40°C) 2°F (1°C)

104°F to 122°F (40°C to 50°C) 4°F (2°C)

Resolution 2°F (1°C)

Relative Humidity

Range 25% RH to 95% RH

Accuracy ±5 RH 40% RH to 80% RH

±7 RH Below 40%/Above 80%

Resolution 1% RH

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99